



Clara Road, Tullamore, Co. Offaly, Ireland Tel: 057 9326000 info@molloyprecast.com Fax: 057 9326060 www.molloyprecast.com

# TV / CCTV / CABLE BOX

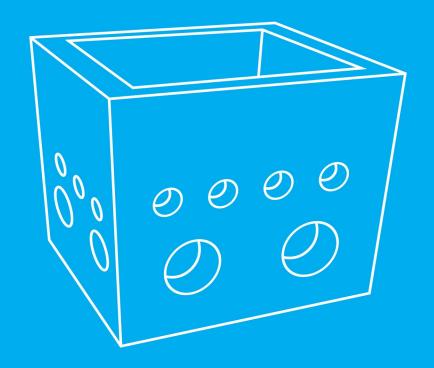

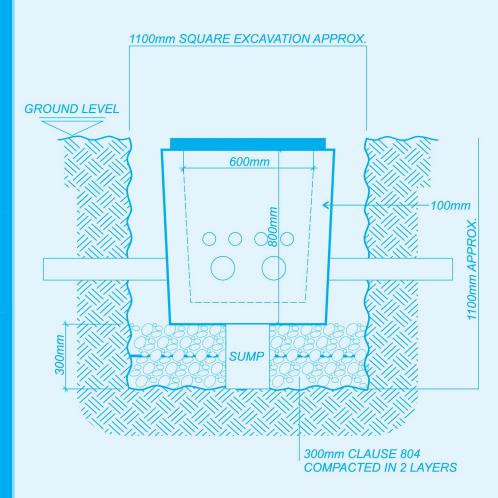

# **INSTALLATION INSTRUCTIONS**

# LOCATION

Establish finished pavement level
-Manhole cover must finish flush with
pavement.

#### EXCAVATION

Excavate to a depth of 1.1m and 1.1m x 1.5m sq. approx

# **FOUNDATION BASE**

oundation base of 300mm Clause 804 ell compacted in 2 layers of 150mm in Where ground conditions are not favourable, a suitable pad should be designed to an Engineers specification.

# INSTALLATION

Place the Vault Box into position on the compacted base and check levels. Ground level must be known or established to within  $\pm -25\,\mathrm{mm}$  tolerance.

# BACKFILL/FINISH

Backfill with Clause 804, compacting frequently, leaving sufficient depth for concrete or tarmacadam finish.

Finish off top of excavation with concrete or tarmacadam finish when laying path. Grouting lugs of the frame must be properly embedded in the concrete or tarmacadam.

Where the frame is not sitting directly on the box, spaces under the frame should be filled with concrete for support.